

Industrial Conveyor Specialists

Installation, Maintenance & Parts Manual For

MODEL 519 - 525 - 526 - 536 - 595

Chain Driven Live Roller Conveyors

For Additional copies of this manual, please visit our website at www.titanconveyors.com Go to Info Center, Select the Maintenance Manual Tab and select the manual for your model conveyor or click on the link below. https://www.titanconveyors.com/info-center#823236-maintenance-manuals

> Titan Conveyors 735 Industrial Loop Road New London, WI 54961 920-982-6600 800-558-3616 FAX 920-982-7750 E-mail: sales@titanconveyors.com Website: www.titanconveyors.com

Serial No.

TITAN 519 - 525 - 526 - 535 - 595 Chain Driven Live Roller Conveyor MANUAL

Table of Contents

Page 2	Table of Contents
	Warranty
Page 3	Safety/Safety Decals
Page 4	Introduction
2	I. Receiving
	II. Installation
	Support Assembly
Page 5	Frame Assembly
Page 6	Component Checklist
Page 7	III. Maintenance
	Motors
	Reducers
Page 9	Bearings
Page 10	Chains and Sprockets
Page 11	
-	CDLR Pop-up Chain Transfer Blow Apart Drawing



(A) Seller warrants that the material in and the workmanship on the equipment manufactured by TITAN will be free from defects at time of shipment. If during the first year from the date of shipment, the Buyer establishes to the seller's satisfaction that any part or parts manufactured by TITAN were defective at the time of shipment, TITAN will, at its own expense, repair or replace (but not install) replacement parts. For a time purpose of this warranty, one year will constitute 2080 hours of operation based on an 8 hour day. Sellers liability under this warranty is limited to replacement parts only and the seller will make no allowance for corrective work done unless agreed to by the seller in writing. Charges for correction of defects by others will not be acceptable, unless so authorized in writing, prior to the work being performed, by an officer of the company. Damage caused by deterioration due to extraordinary wear and tear (including, but not in limitation, use said equipment to handle products of a size, weight and shape or at speeds or methods which differ from information originally provided), chemical action, wear caused by the presence of abrasive materials or by improper maintenance or lubrication or improper storage prior to installation, shall not constitute defects. Failure to install equipment properly shall not constitute defects. Warranty does not cover belt tracking or adjustment at installation or periodic adjustment that may be required during normal operation. Refer to the maintenance manual for belt tracking instructions.

(B) Seller has made no representation, warranties, or guarantees, expressed or implied, not expressly set forth on above paragraph. Seller shall not be liable hereunder for any consequential damages included but not in limitation, damages which may arise from loss of anticipated profits or production or from increased cost of operation or spoilage of material.

(C) The components used in manufacture of said equipment which were manufactured by others will carry such manufacturers' customary warranty, which seller will obtain for buyer upon request.

(D) No representative of TITAN has been conferred with any authority to waive, alter, vary or add to the terms of warranty state herein, without prior authorization in writing executed by an officer of the company.

(E) The foregoing is in lieu of any and all other warranties, expressed or implied, or those extending beyond the description of the product.

04/24

UNIZAAN UNIZAAN

Safety

The Safety alert symbol is used with the signal words

A DANGER, **A** WARNING and **A** CAUTION to alert you to safety messages.

They are used in safety decals on the unit and with proper operation and procedures in this manual. They alert you to the existence and relative degree of hazards.

Understand the safety message. It contains important information about personal safety on or near the conveyor.





CAUTION

POTENTIALLY HAZARDOUS SITUATION which if not avoided, could result in death or serious injury.

POTENTIALLY HAZARDOUS SITUATION which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

POTENTIALLY DESTRUCTIVE SITUATION which if not avoided, may result in damage or reduce the longevity of the equipment.

Safety Decals

ALWAYS replace missing or damaged Safety Decals.

Operational Safety



Keep Hands, feet, hair and loose clothing away when conveyor is running



NEVER climb, sit, walk or ride on conveyor



ALWAYS lock out power before servicing to avoid electrical shock.



ALWAYS keep hair and loose clothing away.




ALWAYS keep hands away from conveyor while moving.



DANGEF

HANDS, FEET, HAIR LOOSE CLOTHING WHEN CONVEYOR IS RUNNING



ALWAYS keep hands, feet, hair & loose clothing away.



ALWAYS read and follow warning labels.



Never run conveyor without guards in place.



DO NOT run conveyor with quard off.

INTRODUCTION

The management and employees of Titan Industries thank you for specifying Titan equipment. This manual will give you the basic information to install and maintain your equipment. If special circumstances or questions come up call Titan at 920-982-6600.

I. RECEIVING

Upon delivery of your Titan conveyor, check the packing slip or bill of lading accompanying the unit. If any components are missing, contact Titan IMMEDIATELY with a description of the missing components along with the conveyor serial number(s). The serial number is found on the serial plate normally positioned by the drive.

Check the unit(s) over carefully upon arrival for damage. If you find any damage note it on the bill of lading. **<u>YOU MUST</u>** also file a claim **<u>IMMEDIATELY</u>** with the carrier.

II. INSTALLATION

WEAR SAFETY GLASSES, SAFETY SHOES, AND GLOVES.



HAVE AREA AROUND INSTALLATION SITE CLEARED OF DEBRIS.

LOCKOUT POWER TO CONVEYOR(S) UNTIL START-UP.


LOOK OUT FOR SHARP EDGES WHILE HANDLING CONVEYOR COMPONENTS.

BE CAREFUL IN AND AROUND THE CONVEYOR(S) DURING INSTALLATION. ALSO, BE AWARE OF OTHERS IN THE AREA.

ONLY ALLOW QUALIFIED PERSONNEL TO ASSEMBLE AND INSTALL CONVEYORS.

SUPPORT ASSEMBLY

Standard supports are always shipped assembled. See FIGURE 1 for a component breakdown.

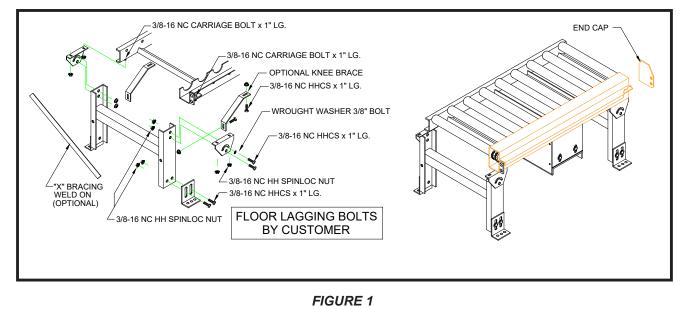

4



IN ORDER FOR THE CONVEYOR TO BE STABLE, THE SUPPORTS MUST BE LAGGED TO THE FLOOR OR SUPPORT STRUCTURE. THIS IS THE CUSTOMER RESPONSIBILITY!!

Titan Zero Pressure Accumulators have been assembled and test run at the factory so very little adjustment is necessary after the units have been field assembled. The following information will help with initial installation of possible part replacement.

FRAME ASSEMBLY

1. Along side the area where the conveyor is to be installed, layout the frame sections in their proper position according to the ordered description or refer to your copy of the approval drawing. If the frame placement has not been shown Titan recommends that the drive section be placed approximately in the center of the overall conveyor length. This is especially important for conveyors over 30 foot in length.

NOTE: IF SEVERAL SECTIONS OF FRAME ARE TO BE JOINED IN A PARTICULAR SEQUENCE, THEY WILL BE FACTORY MATCHED MARKED. SEE *FIGURE 2.*

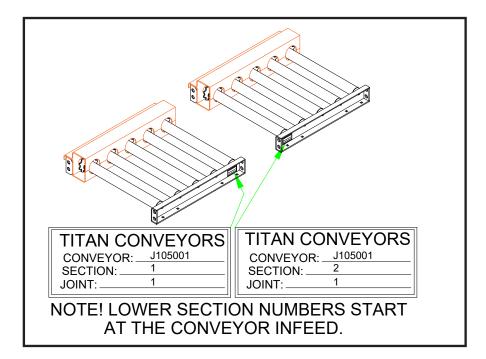


FIGURE 2

- 2. Layout a line on the floor to represent the centerline of the conveyor. As frame sections are bolted together make sure they remain centered on the line.
- 3. Bolt together conveyor frames finger tight. Square frames and make sure all frames line up with adjacent sections before securing all bolts. The frames must be level for proper operation. Adjust the supports as necessary for leveling.
- 4. Take off conveyor chain guards and with strands of chain provided, connect the end rollers from one frame section to another. See *FIGURE 3*.

CONVEYORS CONVEYORS

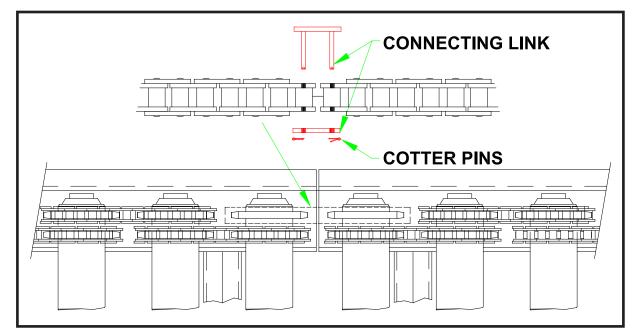


FIGURE 3

WARNING REPLACE CHAIN GUARDS AFTER CHAIN CONNECTION IS COMPLETE.

COMPONENT CHECKLIST

Prior to start up use the following list to double check the conveyor components

\checkmark	MOTOR	Have a qualified electrician ensure the motor is wired correctly for your power source. Check that motor is securely fastened to the reducer or motorbase.
\checkmark	REDUCER	Check that the proper amount of oil is in the reducer.* <i>Make sure a vent plug is installed on the reducer.</i> * (A solid plug is usually installed for shipping.)
\checkmark	BEARINGS	Double check that bearings are fastened securely. Be sure that locking collars are tightened and set screws are secured firmly to the shaft.
\checkmark	GENERAL	Check that sprockets with chain and/or sheaves with V-belt are aligned and properly tensioned.*

*Additional information available in section III Maintenance.

5. Once installation of the conveyor and all of its adjusting elements have been completed, you are ready to run the conveyor empty. Start the conveyor and observe its' operation. Make sure that rollers are not rubbing against the chain guard(s). If you hear any of the chain loops snapping, it could be due to weld or weld spatter in the chain path. In that event, LOCK OUT THE CONVEYOR, disconnect the chain loop, clean off the welding spatter, reconnect the chain and run.

04/24

III. MAINTENANCE

MOTORS

- 1. **CLEANING** All motors should be kept free of dirt and grease accumulations. Open motors should be periodically vacuumed to remove dust and dirt from the windings.
- 2. **VENTILATION** For best results motors should be operated in an area where adequate ventilation is available.
- 3. **TEMPERATURE** Most of todays smooth body T.E.N.V. and T.E.F.C. motors run hot to the touch. As long as maximum ambient temperatures are not exceeded, and more importantly, ampere draw is within the allowable range, there should be no need to worry. (Both of these limits are found on the motor nameplate.)
- 4. **LUBRICATION** Most electric motors are lubricated for life and under normal conditions require no more lubrication. Under severe conditions where additional lubrication is required, use the following chart as a guide.



The following chart is based on motors with grease lubricated bearings, running at speeds of 1750 R.P.M. or less, and operating within a ambient temperature range of between 0 degrees F. to 120 degrees F.

CONDITION	LUBRICATING FREQUENCY
Normal 8 hr. day Light Loads	2 to 3 years
Heavy 24 hr. Day Heavy Loads Dirty Conditions	1 Year
Extreme Shock Loads High Temperatures	3 to 6 Months

Typical lubricants that can be used: Chevron Oil Co. - SRI#2 Shell Oil Co. - Alvania #2, Dolium R Texaco Inc. - Premium RB

Gulf Refining Co. - Precision #2 or #3 Mobile Oil Co. - Mobilux Grease #2 Sinclair Refining Co. - A.F.#2

REDUCERS

The following reducer information is concerned primarily with wormgear reducers. If your conveyor is equipped with another type, refer to the manufacturer's recommendations for installation and maintenance sent along at time of shipment.

 ASSEMBLE / DISASSEMBLE MOTOR TO REDUCER - Because many of today's motor keyways are cut with a sidemill cutter, the following assembly instructions should be followed to insure a trouble-free fit between motor and reducer. First, place the key into the reducer keyway. Second, line up the motor keyseat with the key and push the motor shaft into the reducer bore. Third, finish assembly by bolting the motor to the reducer flange. This insures that the key does not slide back in the motor keyseat. See FIGURE 4.

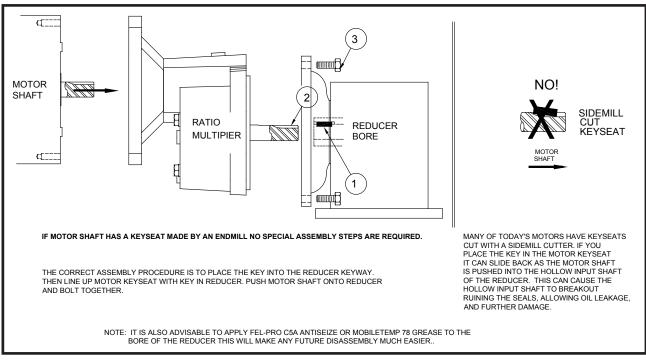


FIGURE 4

2. VENTILATION - During normal operation gear reducers build up heat and pressure that MUST be vented to protect the seals and gears. If not installed at Titan, a brass vent plug contained in a small plastic bag, will be put in a box or larger bag along with fasteners sent loose for use during field installation. Remove the top most drain plug (refer to *FIGURE 5* for the position of your reducer) and install the vent plug securely in place.

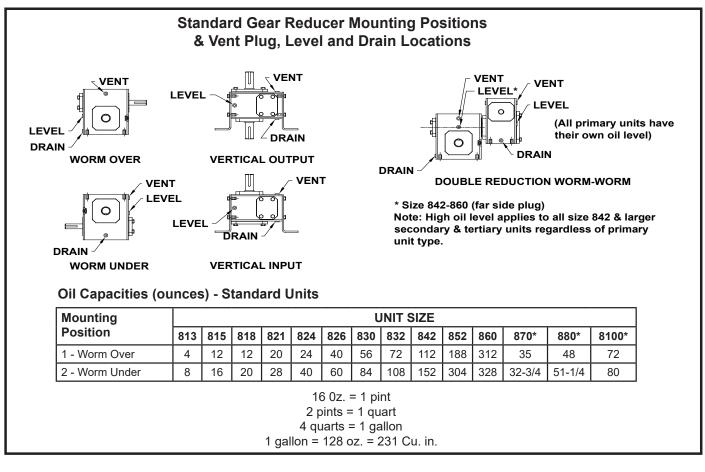


FIGURE 5 8

04/24

CONVEYORS CONVEYORS

3. CLEANING - After approximately two to three weeks of operation the reducer MUST be drained, flushed out, and refilled to the proper level with fresh oil. (This is done to remove brass particles caused during the normal wear-in period of the worm gear.) Afterwards, the oil should be changed in your reducer every 2500 hours or every 6 months, which ever occurs first.



WHERE HIGH TEMPERATURES AND/OR DIRTY ATMOSPHERE EXISTS MORE FREQUENT CHANGES MAY BE NECESSARY. PERIODICALLY CHECK REDUCER TO ENSURE THAT THE PROPER LEVEL OF OIL IS IN THE REDUCER. TOO LITTLE OIL WILL CAUSE ACCELERATED WEAR ON THE GEARS. TOO MUCH OILCAN CAUSE OVERHEATING, SEAL DETERIORATION, AND LEAKAGE.

- 4. **LUBRICATION** The precision made gears and bearings in our reducers require high-grade lubricants of the proper viscosity to maintain trouble- free performance. All standard reducers ordered from the factory are filled with ISO viscosity grade **Mobil Glygoyle 460 polyalkalene glycol (PAG)** lubricant. If oil needs to be added or changed, ONLY compatible polyglycol lubricants should be used. Contact the factory for more information.
- TEMPERATURE Most Titan units are supplied with worm gear reducers. These units may run at temperatures between 100 degrees to 200 degrees F. (Higher temperatures are especially common during start up). There is NO NEED TO WORRY unless temperatures exceed 200 degrees F.
- 6. **GENERAL MAINTENANCE** Regular inspection to insure the reducer bolts and screws are tight, correct alignment of shaft and/or coupling, no major oil leaks, no excessive heating and no unusual vibration or noise will insure maximum life and performance of the reducer.

BEARINGS

1. **LUBRICATION** - Bearings used on Titan conveyors are normally pre-lubed for life. If customer requested re-lube bearings are provided, the use of a #2 consistency lithium based grease is advised.

Greasing frequency should be as many times as necessary to maintain a small film of grease leaking at the seals. This will protect against foreign materials entering the bearing. The following list is provided to aid you in acquiring the proper grease or an equivalent.

NORMAL DUTY	HEAVY DUTY
Texaco - Multifak #2	Sun - Prestige 742EP
Mobile - Mobilux #2	Exxon - Lidok #2EP
Amoco - Lithium MP	Arco - Litholene HEP2
Shell - Alvania #2	Shell - Alvania #2EP

2. **REPLACEMENT** - If replacement of bearings become necessary remember to clean off the shaft, file smooth any grooves or set screw marks, and oil the shaft before slipping on the new bearing.



IF BEARING DOES NOT SLIDE ON EASILY, USE A SOFT METAL BAR TO TAP AGAINST THE INNER RACE TO ASSEMBLE.

3. **GENERAL** - Set up a weekly check on all bearings to ensure they remain tightly bolted down, set screws remain fastened securely, and are properly lubricated.

CONVEYORS CONVEYORS

CHAIN & SPROCKETS

For longest chain life a constant film of oil is recommended. We recommend a good quality non-detergent petroleum base oil. Use the chart below.

WARNING

SHUT OFF CONVEYOR BEFORE REMOVING GUARDS TO APPLY OIL.


TEMPERATURE	RECOMMENDED OIL VISCOSITY
20 degrees - 40 degrees F	SAE 20
40 degrees - 100 degrees F	SAE 30
100 degrees - 120 degrees F	SAE 40
120 degrees - 140 degrees F	SAE 50



REMEMBER - ALL GUARDS AND BOTTOM PANS, IF PROVIDED, MUST BE REPLACED BEFORE RUNNING CONVEYOR. TITAN INDUSTRIES IS NOT RESPONSIBLE FOR INJURIES CAUSED BY NOT COMPLYING WITH SAFETY INSTRUCTIONS. CONVEYORS CONVEYORS



MODELS 519 - 525 - 526 - 535 - 595 CHAIN TO CHAIN DRIVEN LIVE ROLLER CONVEYOR

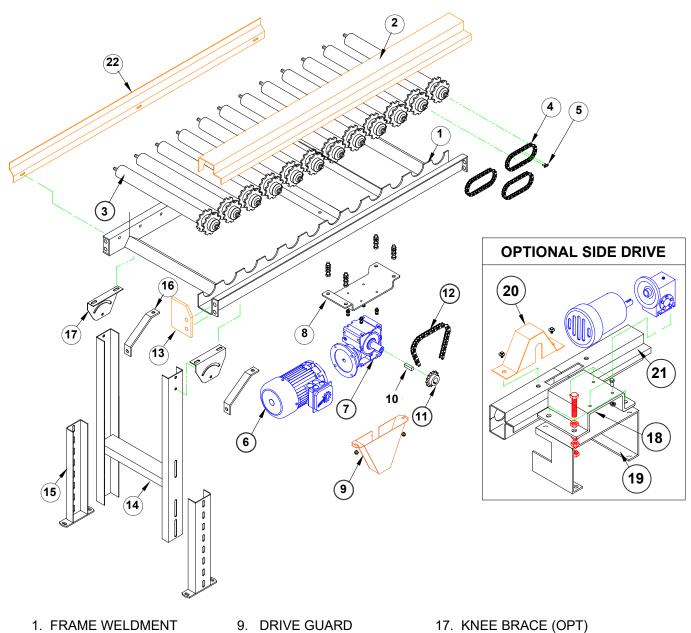

- 2. CHAIN GUARD
- 3. ROLLER ASSEMBLY
- 4. CHAIN LOOP
- 5. CONNECTOR LINK
- 6. **MOTOR**
- 7. REDUCER
- 8. MOTOR BASE
 - RECOMMENDED SPARE PARTS TO BE STOCKED AT YOUR LOCATION

10. KEY

13. END CAP

11. • DRIVE SPROCKET

14. H. D. UPPER SUPPORT

15. H.D. LOWER SUPPORT

12. • ROLLER CHAIN

16. SMILE BRACKET

- 18. SIDE MT. MOTOR BASE
- 19. SIDE MT. MOTORBASE CHANNEL

04/24


- 20. SIDE MT. DRIVE GUARD
- 21. CHAIN GUARD (SPLIT)
- 22. Z-STRIP GUARD

CONVEYORS CONVEYORS

UNIFORN UNIFORN



MODEL C.D.L.R. POP-UP TRANSFER - SINGLE DIRECTION

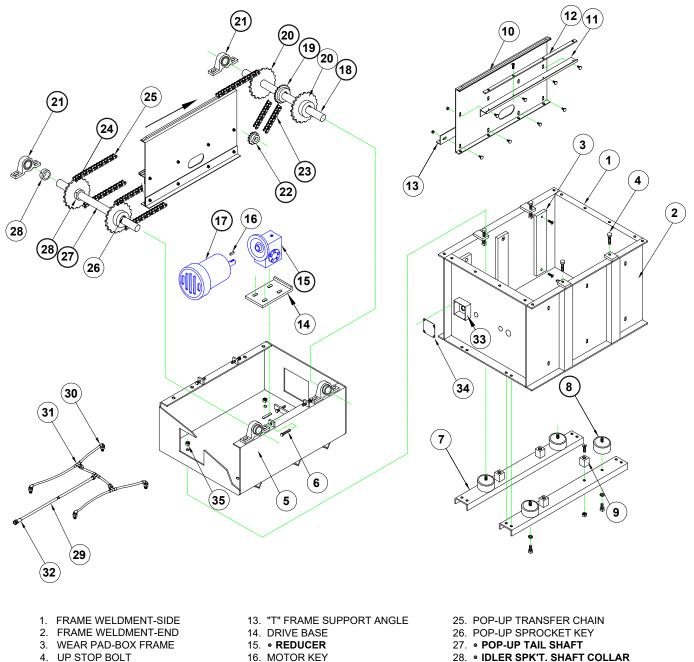

- 5. POP-UP BOX FRAME
- 6. PUSHER BOLT
- 7. AIR BAG SUPPORT CHANNEL
- 8. AIR BAG
- 9. BOTTOM STOP
- 10. POP-UP CHAIN TRACK
- 11. CHAIN RETURN TRACK
- 12. WEAR STRIP-RETURN TRACK
- 16. MOTOR KEY
- 17. MOTOR
- 18. POP-UP DRIVE SHAFT
- 19. DRIVEN SPROCKET
- 20. POP-UP CHAIN SPRK'T. K & S
- 21. PILLOW BLOCK BEARING
- 22. DRIVE SPROCKET
- 23. ROLLER CHAIN
- 24. POP-UP CHAIN SPK'T. IDLER
- 28. IDLER SPK'T. SHAFT COLLAR
- 29. AIR LINE
- 30. 90° ELBOW FITTING
- 31. FEMALE "T" FITTING
- 32. BULKHEAD FITTING
- 33. 4 x 4 "J" BOX
- 34. "J" BOX COVER
- 35. NUT-AIR BAG INLET STEM

• RECOMMENDED SPARE PARTS TO **BE STOCKED AT YOUR LOCATION**

04/24 CONVEYORS CONVEYORS